



SETTING UP YOUR GSO BAFFLE

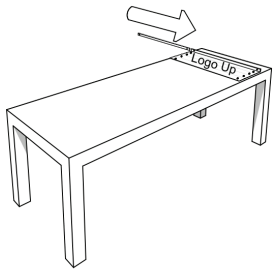


STEP 1

Lay your GSO Baffle on a flat surface with the “Negative Air Systems” logo facing up.

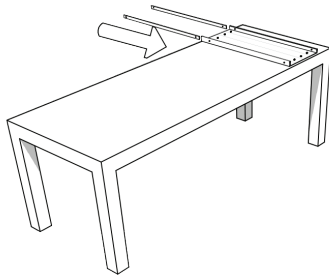


STEP 2

Insert the UPPER Stiffner Bar (flat bar with 1/4” hole) in sleeve just above “Negative Air Systems” logo.

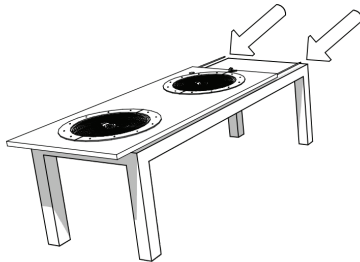


STEP 3

Insert the LOWER Stiffner Bar (flat bar with 1/2” slot) in sleeve at bottom of the Baffle.

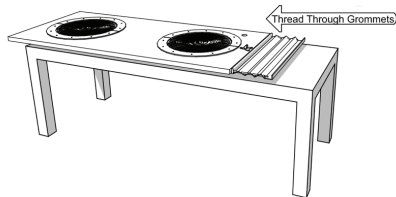

STEP 4

Slide the blunt end of each 20” Anodized Rod into the two holes on the top of your ZEPHYR (make sure the end of the Anodized Rod with the 3/8” tapered end is accessible). Slide each rod down fully, leaving 3” exposed.

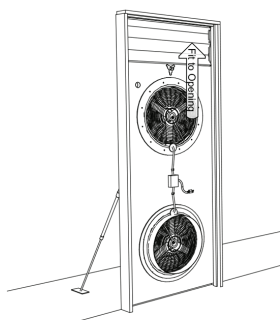

STEP 5

Place the GSO Baffle on top of your ZEPHYR by “threading” the Baffle onto the Anodized Rods. Start with the slotted flat bar first, then through each of the Brass Grommets, then insert the tapered end of the Rods into the UPPER Stiffner Bar holes.

STEP 6

You’re almost there! Simply adjust the Anodized Rods up to fit into the door opening.

For a video tutorial and frequently asked questions, visit
WWW.NEGAIRSYS.COM

You can reach us by phone:
(770) 425-4770 or
(800) 346-6387

or by email at:
INFO@NEGAIRSYS.COM

Through passion, dedication, and innovation, our team at Negative Air Systems is continuously striving to provide quality products. Please let us know how we are doing!

